


# burmon **BUCK BRACE** INSTALLATION & FIXING GUIDE

**1**


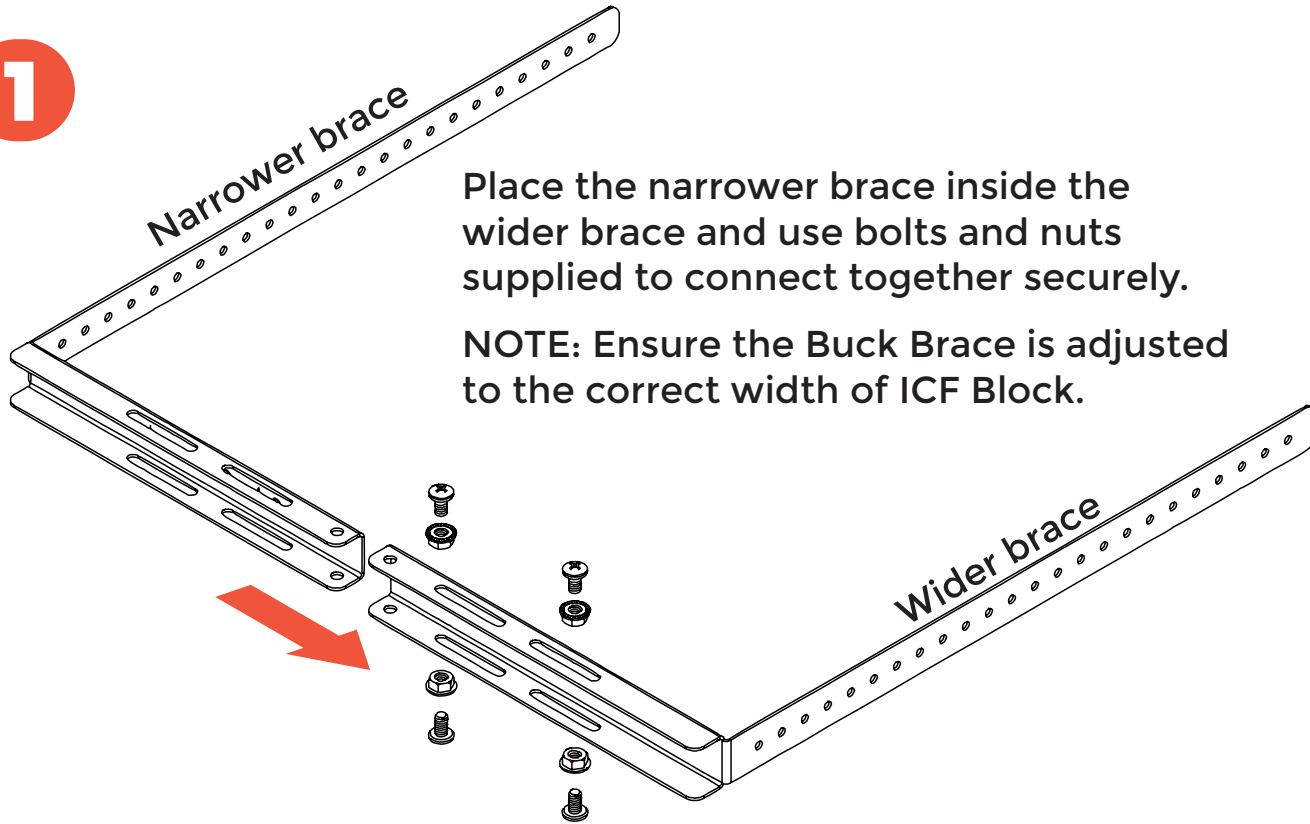


Place the narrower brace inside the wider brace and use bolts and nuts supplied to connect together securely.

**NOTE:** Ensure the Buck Brace is adjusted to the correct width of ICF Block.

**2**

Screw the assembled Buck Brace to the sides of ICF wall securely using 2 screws each side spaced as shown.

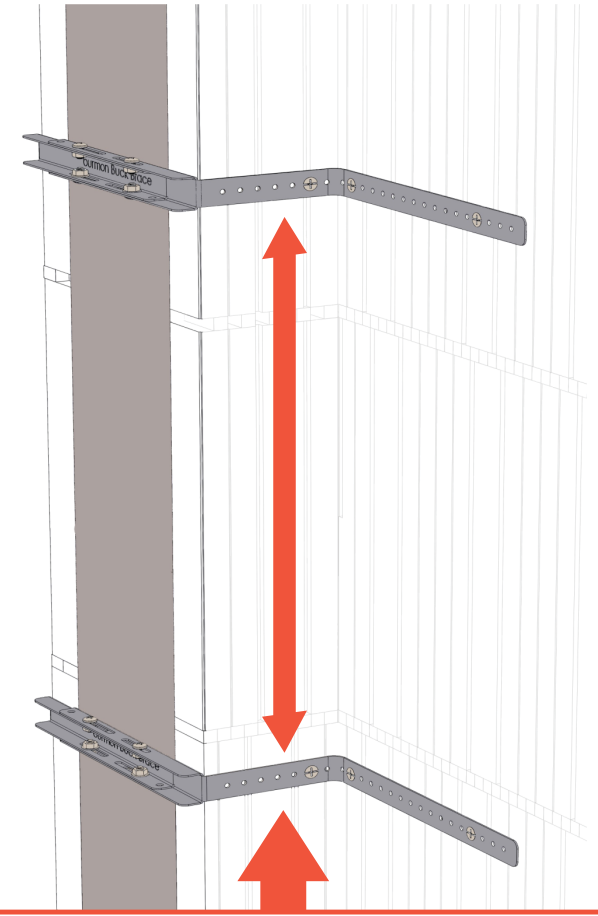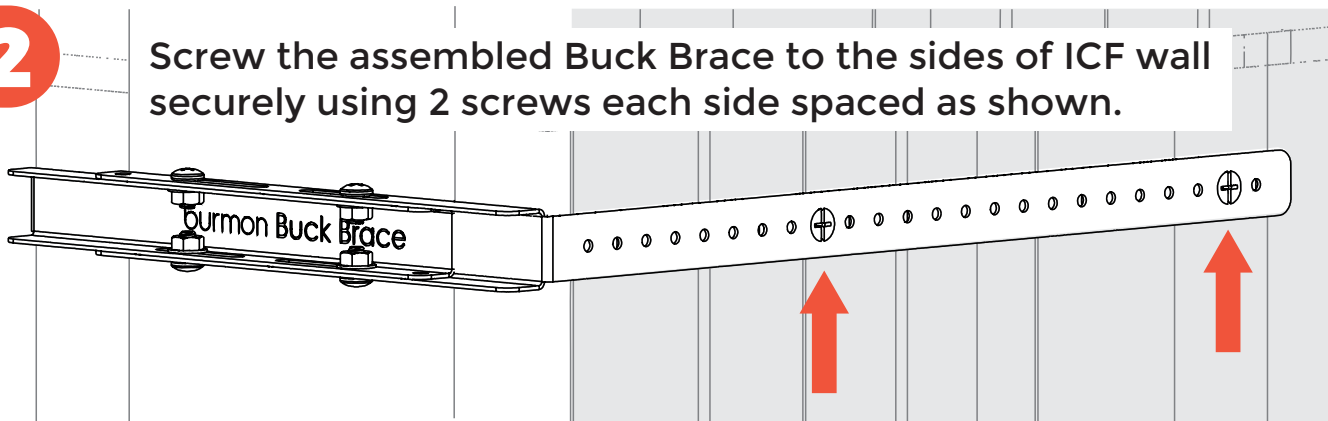

**IMPORTANT NOTE:** The Buck Brace shall be installed no less than 2 feet apart on a 6-inch core ICF Block and 18 inches apart on an 8-inch core ICF block. This minimum distance between braces will ensure adequate window and door opening bracing.